


## Technical Bulletin – F-WAVE® REVIA® – Extreme Clip Installation

**Extreme Clips provide permanent and secure fixing of FWAVE shingles on very steep roofs like turrets or mansard roofs, or where the roof is exposed to extreme weather conditions in hurricane zones or coastal areas. Extreme Clips are available in black or brown.**

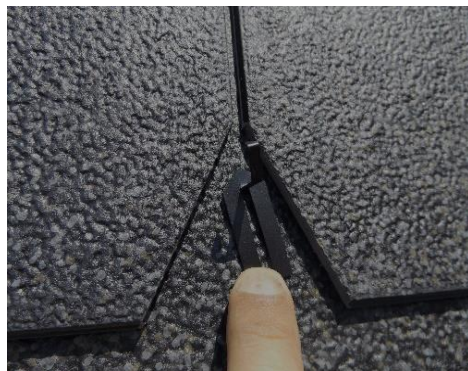

### Step 1.

Insert clip into shingle keyway with the point of the clip facing up the roof.

Inserte el clip en el chavetero de la teja con la punta del clip mirando hacia la cima del techo




### Step 2.

Slide clip up the keyway.

Forcing clip can cause damage to clip, or shingle.

Empuje el clip hacia arriba del chavetero.

Forzar el clip puede causar daños en el clip o en la teja.

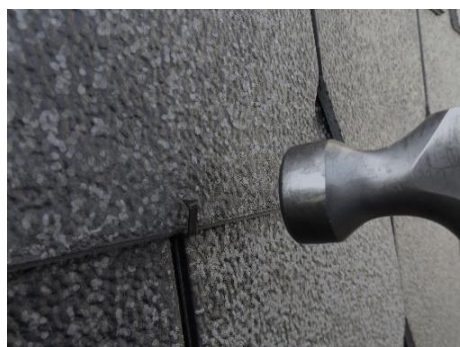

### Step 3.

Ensure clip is straight with the keyway.

Once clip is in place, strike clip with hammer.

Asegúrese de que el clip esté recto con el chavetero. Una vez que el clip esté en su lugar, golpéelo con un martillo.



### Step 4.

Clip should be secured and laying flush on tab.

El clip debe estar asegurado y colocado al ras de la esquina.